## **OWNER'S MANUAL** XACT PRO 7548

Art. no. 53000178en





Congratulations on your decision to purchase a WP chassis component. You are now the owner of a state-ofthe-art sports chassis that you will continue to enjoy for a long time if you maintain it properly.

We wish you good and safe riding at all times!

The Owner's Manual contained the latest information for this model series at the time of going to print. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications contained are non-binding. WP Suspension GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without providing reasons, to adapt these to local conditions, as well as to stop the production of a particular model without prior notice. WP accepts no liability for delivery options, deviations from figures and descriptions, misprints, and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2019 WP Suspension GmbH, Mattighofen Austria All rights reserved Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

WP Suspension GmbH Stallhofnerstraße 3 5230 Mattighofen, Austria

This document is valid for the following models: XACT PRO 7548 (14.18.2T.07)



53000178en

06/2019

### **TABLE OF CONTENTS**

1	MEANS OF REPRESENTATION 3		
	1.1	Symbols used 3	
	1.2	Formats used 3	
2	SAFET	Y ADVICE 4	
	2.1	Use definition – intended use 4	
	2.2	Misuse 4	
	2.3	Safety advice 4	
	2.4	Degrees of risk and symbols 4	
	2.5	Safe operation 4	
	2.6 2.7	Work rules 5 Environment 5	
	2.7	Owner's Manual	
	2.9	Correct installation	
	2.10	Chassis tightening torques 5	
3	IMPOF	TANT NOTES 6	
	3.1	Manufacturer and implied warranty 6	
	3.2	Fuel, auxiliary substances	
	3.3	Spare parts, accessories 6	
	3.4	Service 6	
	3.5	Figures 6	
	3.6	Customer service 6	
4	SERIA	L NUMBERS 7	
	4.1	Fork article number7	
5	PREPA	ARING FOR USE 8	
	5.1	Advice on preparing for first use	
6	RIDING	G INSTRUCTIONS 9	
	6.1	Checks and maintenance measures when preparing for use	
-			
7		CE SCHEDULE 10	
		Additional information	
	7.2 7.3	Required work	
8		CE WORK ON THE CHASSIS 11	
	8.1	Raising the motorcycle with a lift	
	0.1	stand 11	
	8.2	Removing standard fork legs 🔌 11	
	8.3	Installing the WP PRO	
	0 /	COMPONENTS fork legs	
	8.4 8.5	Bleeding the fork legs 12 Cleaning the dust boots of the fork	
	0.0	legs 12	
	8.6	Removing the motorcycle from the	
		lift stand 13	

9	TUNING THE CHASSIS 1		
	9.1	Checking the basic chassis setting with rider's weight	14
	9.2	Checking the basic setting of the fork	14
	9.3	Adjusting the compression damping of the fork	14
	9.4	Adjusting the rebound damping of the fork	
	9.5	Adjusting the spring preload of the	
		fork	16
10	TECHN	IICAL DATA	17
	10.1	Fork	17
11	SUBST	ANCES	18
12	STAND	ARDS	19
13	INDEX	OF SPECIAL TERMS	20
14	LIST O	F ABBREVIATIONS	21
INDEX			22

#### 1.1 Symbols used

Brand™

The meaning of specific symbols is described below.

	Indicates an expected reaction (e.g. of a work step or a function).	
X	Indicates an unexpected reaction (e.g. of a work step or a function).	
2	All work marked with this symbol requires specialist knowledge and technical understand- ing. In the interest of your own safety, have these jobs performed by a WP Authorized Cen- ter! There your WP chassis will be treated with the optimum care and attention by specially trained experts using the necessary special tools.	
	Indicates a page reference (more information is provided on the specified page).	
i	Indicates information with more details or tips.	
<b>»</b>	Indicates the result of a testing step.	
•	Indicates the end of an activity, including potential rework.	
1.2	Formats used	
	raphical formats used in this document are explained below.	
Proprietar		
Name®	Indicates a protected name.	

<u>Underlined terms</u> Refer to technical details or indicate technical terms, which are explained in the glossary.

Indicates a brand available on the open market.

#### 2.1 Use definition – intended use

This chassis component is designed and built to withstand the normal stresses and strains of regular racing.

#### lnfo

Only use this chassis component in closed-off areas remote from public road traffic. Only use this chassis component in the vehicle for which the chassis component is approved and/or recommended.

#### 2.2 Misuse

The chassis component must only be used as intended.

Dangers can arise for people, property and the environment through use not as intended. Any use of the chassis component beyond the intended and defined use constitutes misuse. Misuse also includes the use of operating and auxiliary fluids which do not meet the required specification for the respective use.

#### 2.3 Safety advice

A number of safety instructions need to be followed to operate the product described safely. Therefore read this instruction and all further instructions included carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.

#### Info

Various information and warning labels are attached in prominent locations on the product described. Do not remove any information or warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

#### 2.4 Degrees of risk and symbols

### **Danger**

Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



#### Warning

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.

#### Note

Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.

#### 2.5 Safe operation

#### Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle and use chassis components if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle and use chassis components if you are physically or mentally impaired.

Only use the chassis component when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

If there are faults, which impair safety, have them immediately remedied in a WP Authorized Center. Adhere to the information and warning labels on the chassis component.

#### 2.6 Work rules

Special tools are necessary for certain tasks. The tools are not a component of the chassis component, but can be ordered using the number in parentheses.

During assembly, use new parts to replace parts which cannot be reused (e.g., seals, seal rings, O-rings). In the case of certain screws, a thread locker (e.g. **Loctite**<sup>®</sup>) is required. Observe the manufacturer's instructions.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After completing a repair or service work, check the operating safety of the chassis component.

#### 2.7 Environment

If you use your chassis component responsibly, you can ensure that problems and conflicts do not occur. When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

#### 2.8 Owner's Manual

It is important that you read this Owner's Manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and service your motorcycle. This is the only way for you to find out how to set up the chassis component ideally and how to protect yourself from injury.

Keep the Owner's Manual in an accessible place to enable you to refer to it as needed.

If you would like to know more about the chassis component or have questions on the material you read, please contact a WP Authorized Center.

The Owner's Manual is an important part of the chassis component and must be handed over to the new owner if the vehicle is sold.

#### 2.9 Correct installation

Correct installation analogously to original components and in accordance with the instructions of the vehicle manufacturer is essential for ensuring maximum safety and functionality.

It is therefore strongly recommended that you have the chassis component installed at a WP Authorized Center.

#### 2.10 Chassis tightening torques

Unless otherwise stated, the tightening torques that apply are those in the vehicle manufacturer's instructions.

#### 3.1 Manufacturer and implied warranty

The work prescribed in the service schedule must be carried out in a WP Authorized Center only, since otherwise no warranty claims will be recognized. Damage or secondary damage caused by tampering with and/or conversions on the chassis component are not covered by the warranty.

#### 3.2 Fuel, auxiliary substances

Use operating and auxiliary substances (such as fuel and lubricants) as specified in the Owner's Manual.

#### **3.3** Spare parts, accessories

For your safety, only use spare parts and accessory products that are approved and/or recommended by WP and have them installed in a WP Authorized Center. WP accepts no liability for other products and any resulting damage or loss.

Certain spare parts and accessory products are specified in parentheses in the descriptions. Your WP Authorized Center will be pleased to advise you.

#### 3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work is properly carried out as described in the Owner's Manual. Incorrect adjustment and tuning of the chassis and suspension can lead to damage and breakage of components.

Use of the chassis component under difficult conditions, such as on sand or on wet and muddy surfaces, can lead to considerably more rapid wear. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

It is imperative that you adhere to the stipulated service intervals. If you observe these exactly, you will ensure a much longer service life for your chassis component.

#### 3.5 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.


#### 3.6 Customer service

If you have any questions about your chassis component or WP, your WP Authorized Center will be pleased to advise you.

A list of WP Authorized Centers can be found on the WP website. International WP Suspension website: http://www.wp-suspension.com

#### SERIAL NUMBERS 4

#### 4.1 Fork article number

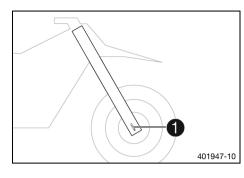

The fork article number 1 is stamped on the inside of the axle clamp.

#### Info Π

•

The fork article number consists of an eight figure number with a single letter in the sixth position.

#### 5.1 Advice on preparing for first use

### Warning

**Danger of accident** Modifications to the suspension setting may seriously alter the handling characteristic.

Extreme modifications to the suspension setting may cause a serious deterioration in the handling characteristic and overload components.


- Only make adjustments within the recommended range.
- Ride slowly to start with after making adjustments to get the feel of the new handling characteristic.
- Adjust the rebound damping of the fork. (E p. 15)

.

#### 6.1 Checks and maintenance measures when preparing for use

### Info Before

Before every use, check the condition of the chassis component and ensure that it is safe to operate. The chassis must be in perfect technical condition when it is being operated.

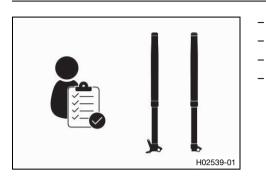

- Check chassis component for damage.
- Clean the dust boots of the fork legs. (I p. 12)
- Bleed the fork legs. (📖 p. 12)
- Check all screw connections to ensure that they are tight.

#### 7.1 Additional information

Any further work that results from the required work or from the recommended work must be ordered separately and can be invoiced separately.

Different service intervals may apply in your country, depending on the local operating conditions.

#### 7.2 Required work

Service the fork. 🔧

• Periodic interval

#### 7.3 Recommended work

After 10 operating hours

Every 40 operating hours

•

0

Service the fork.


• One-time interval

#### 8.1 Raising the motorcycle with a lift stand

#### Note


Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

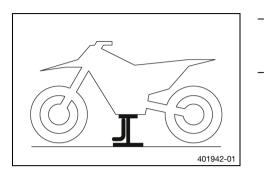


- Raise the motorcycle in accordance with the instructions of the vehicle manufacturer.
  - ✓ Neither wheel is in contact with the ground.
- Secure the motorcycle against falling over.

#### 8.2 Removing standard fork legs 🔾

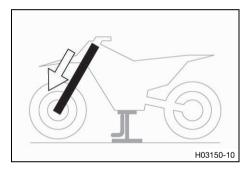

Remove the standard fork legs as per the instructions of the vehicle manufacturer.

#### 8.3 Installing the WP PRO COMPONENTS fork legs 4

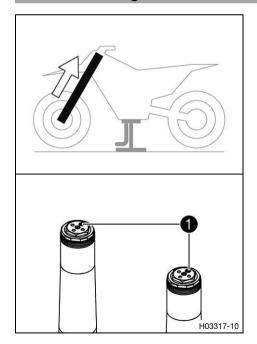


Install the fork legs in accordance with the instructions of the vehicle manufacturer.

Observe the installation position of the milled grooves to the upper edge of the upper triple clamp.		
125/150 SX EU, TC 125/150 EU	3rd groove from the top	
remaining EU versions	2nd groove from the top	
all US versions	2nd groove from the top	

Bleeder screws 1 are positioned toward the front.

### 8 SERVICE WORK ON THE CHASSIS

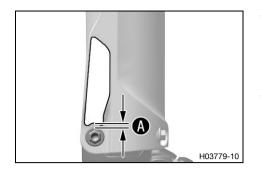


#### 8.4 Bleeding the fork legs

- Apply the sticker for measuring sag at distance (A) from the fork protector screw.

Guideline			
Distance	2 mm (0.08 in)		

Apply the remaining stickers included in the scope of supply.

### Raise the motorcycle with a lift stand. (Imp. 11) Main work

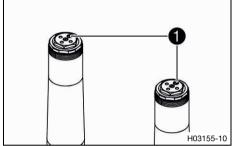

Release bleeder screws 1.

Preparatory work

- Any excess pressure escapes from the interior of the fork.
- Tighten the bleeder screws.

#### **Finishing work**

- Remove the motorcycle from the lift stand. (IP p. 13)

#### 8.5 Cleaning the dust boots of the fork legs

H03152-10

#### Preparatory work

- Raise the motorcycle with a lift stand. (E p. 11)
- Remove the fork protector.

#### Main work

Push dust boots 1 of both fork legs downward.


#### lnfo

The dust boots remove dust and coarse dirt particles from the inside fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.

#### Warning

**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.
- Clean the dust boots and inner fork tubes of both fork legs.
- Press the dust boots back into their installation position.
- Remove excess oil.



#### Finishing work


- Install the fork protector.

#### 8.6 Removing the motorcycle from the lift stand

#### Note

Danger of damage The parked vehicle can roll away or fall over.


- Park the vehicle on a firm and level surface.

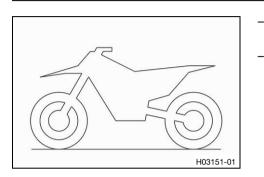

- Remove the motorcycle from the lift stand as per the instructions of the vehicle manufacturer.
- Remove the lift stand.

9.1

#### Checking the basic chassis setting with rider's weight

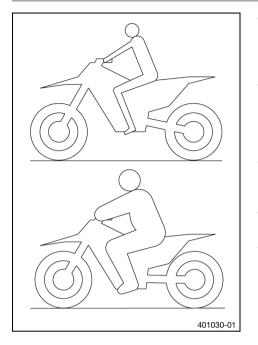

- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, link fork and frame, the basic settings of the suspension components must match the rider's weight.
- This chassis component is factory set to a standard rider's weight.

е

Standard rider weight	75 85 kg (165 187 lb.)
-----------------------	------------------------

- If the rider's weight is above or below this range, the basic setting of the suspension components must be adjusted accordingly.
- Minor differences in the rider's weight can be compensated for by modifying the spring preload.
- In case of larger differences, appropriate springs must be fitted.


• Info

Suitable springs are available from a WP Authorized Center.

#### 9.2 Checking the basic setting of the fork

• Info

For various reasons, no exact riding sag can be determined for the fork.

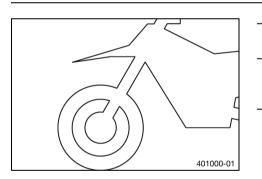


- As with the shock absorber, smaller differences in the rider's weight can be compensated by the spring preload.
- However, if the fork frequently bottoms out (hard end stop on compression), harder springs must be fitted to avoid damage to the fork and frame.
- If the fork feels unusually hard after extended periods of operation, the fork legs need to be bled.

#### 9.3 Adjusting the compression damping of the fork

#### Info

The hydraulic compression damping determines the fork suspension behavior.

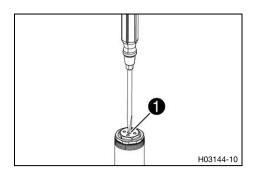

- Turn adjusting screws 1 clockwise up to the last perceptible click.

#### Info

The adjusting screws are located at the top end of the fork legs.

Make the same adjustment on both fork legs. A screwdriver is shown for better illustration, an adjustment tool is included in the scope of delivery.

Turn counterclockwise by the number of clicks corresponding to the fork type.

#### Guideline

Compression damping			
125/150/250 SX EU TC 125/150/250 EU	19 clicks		
250/350/450 SX-F EU, 350 SX-F US FC 250/350/450 EU, FC 350 US	14 clicks		
125/250 SX US, 250/450 SX-F US TC 125/250 US, FC 250/450 US	12 clicks		

#### Info


Turn clockwise to increase damping; turn counterclockwise to reduce damping.

#### 9.4 Adjusting the rebound damping of the fork

#### Info

•

The hydraulic rebound damping determines the fork suspension behavior.

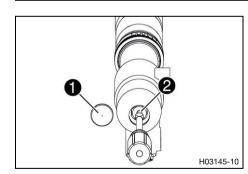

- Take off protection caps 1.
- Turn adjusting screws 2 clockwise up to the last perceptible click.

#### Info

The adjusting screws are located at the bottom end of the fork legs.

Make the same adjustment on both fork legs.

Turn counterclockwise by the number of clicks corresponding to the fork type.

### **9 TUNING THE CHASSIS**

#### Guideline

Rebound damping			
125/150/250 SX EU,	18 clicks		
125 SX US,			
250/350/450 SX-F US			
TC 125/150/250 EU,			
TC 125 US,			
FC 250/350/450 US			
250/350/450 SX-F EU	20 clicks		
FC 250/350/450 EU			
250 SX US	19 clicks		
TC 250 US			

#### Info

Turn clockwise to increase damping; turn counterclockwise to reduce damping.


Mount protection caps 1.

#### 9.5 Adjusting the spring preload of the fork



- Raise the motorcycle with a lift stand. (E p. 11)

#### Main work

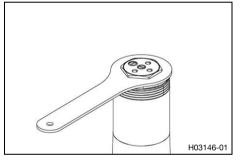

Turn the **Preload Adjuster** counterclockwise to the last perceptible click.

Adjusting spanner (T14028)

#### Info

The adjusting spanner is included. Make the same adjustment on both fork legs.

Turn clockwise by the number of turns corresponding to the fork type.

#### Guideline

Spring preload –	0 turns
preload adjuster	

The **Preload Adjuster** engage noticeably.

#### lnfo

One turn is equivalent to two clicks. Adjust the spring preload only to the perceptible clicks, as the preload will not engage between clicks. Turn clockwise to increase the spring preload; turn counterclockwise to reduce the spring preload. Adjusting the spring preload has no influence on the absorption setting of the rebound. Basically, however, you should set the rebound damping higher with a higher spring preload.

#### **Finishing work**

### 10.1 Fork

Fork article number		14.18.2T.07			
Fork		XACT PRO 7548			
Compression damping					
125/150/250 SX EU TC 125/150/250 EU		19 clicks			
250/350/450 SX-F EU, 350 SX-F FC 250/350/450 EU, FC 350 US		14 clicks			
125/250 SX US, 250/450 SX-F U TC 125/250 US, FC 250/450 US		12 clicks			
Rebound damping		I			
125/150/250 SX EU, 125 SX US 250/350/450 SX-F US TC 125/150/250 EU, TC 125 US FC 250/350/450 US		18 clicks			
250/350/450 SX-F EU FC 250/350/450 EU		20 clicks			
250 SX US TC 250 US		19 clicks			
Spring preload – preload adjuster		0 turns			
Spring length with preload spacer(s	3)	488 mm (19.21 in)			
Fork length		950 mm (37.4 in)			
All EU versions					
Oil capacity, external mechanism 445 ml (15.05 fl. c		oz.)	Fork oil (SAE 4) (48601166S1) (🗐 p. 18)		
All US versions					
Oil capacity, external mechanism 450 ml (15.21 fl. c		oz.)	Fork oil (SAE 4) (48601166S1) (≅ p. 18)		
All EU versions					
Oil capacity, cartridge	175 ml (5.92 fl. oz	)	Fork oil (SAE 4) (48601166S1) (💷 p. 18)		
All US versions					
Oil capacity, cartridge	170 ml (5.75 fl. oz	)	Fork oil (SAE 4) (48601166S1) (💷 p. 18)		

#### Fork oil (SAE 4) (48601166S1)

#### Standard/classification

– SAE (🕮 p. 19) (SAE 4)

Guideline

 Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

#### SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

### **13 INDEX OF SPECIAL TERMS**

PA	Preload adjuster	Device on the suspension components that enables
		the adjustment of the spring preload

Art. no.	Article number
ca.	circa
cf.	compare
e.g.	for example
etc.	et cetera
i.a.	inter alia
no.	number
poss.	possibly

### INDEX

Α	
Accessories	. 6
Auxiliary substances	. 6
В	
Basic chassis setting	
checking with rider's weight	14
C	
Correct installation	. 5
Customer service	. 6
E	
Environment	. 5
F	
Figures	. 6
Fork	
article number	. 7
basic setting, checking	14
compression damping, adjusting	14
rebound damping, adjusting	15
Fork legs	
bleeding	12
dust boots, cleaning	12
spring preload, adjusting	16
standard version, removing	11
WP PRO COMPONENTS version, installing	11
WP PRO COMPONENTS version, installing Fuel, oils, etc.	
	. 6
Fuel, oils, etc.	. 6 . 6
Fuel, oils, etc.   I   Implied warranty	. 6 . 6
Fuel, oils, etc.    I   Implied warranty   Intended use   M	. 6 . 6
Fuel, oils, etc.   I   Implied warranty   Intended use   M   Misuse	. 6 . 6 . 4
Fuel, oils, etc.   I   Implied warranty   Intended use   M   Misuse   Motorcycle	. 6 . 6 . 4
Fuel, oils, etc.       I       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with	. 6 . 4 . 4
Fuel, oils, etc.       I       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with       lift stand, removing from	. 6 . 6 . 4
Fuel, oils, etc.       I       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with       lift stand, removing from	. 6 . 4 . 4 11 13
Fuel, oils, etc.       I       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with       lift stand, removing from       O       Owner's Manual	. 6 . 4 . 4
Fuel, oils, etc.       I       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with       lift stand, removing from	. 6 . 4 . 4 11 13
Fuel, oils, etc.       I       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with       lift stand, removing from       O       Owner's Manual       P       Preparing for use	. 6 . 4 . 4 . 4 . 11 . 5
Fuel, oils, etc.       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with       lift stand, removing from       O       Owner's Manual       P       Preparing for use       advice on preparing for first use	. 6 . 4 . 4 . 4 . 11 . 5
Fuel, oils, etc.       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with       lift stand, removing from       O       Owner's Manual       P       Preparing for use       advice on preparing for first use       checks and maintenance measures when	. 6 . 4 . 4 . 1 13 . 5
Fuel, oils, etc.       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with       lift stand, removing from       O       Owner's Manual       P       Preparing for use       advice on preparing for first use	. 6 . 4 . 4 . 1 13 . 5
Fuel, oils, etc.       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with       lift stand, removing from       O       Owner's Manual       P       Preparing for use       advice on preparing for first use       checks and maintenance measures when	. 6 . 4 . 4 . 1 13 . 5
Fuel, oils, etc.       I       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with       lift stand, removing from       O       Owner's Manual       P       Preparing for use       advice on preparing for first use       checks and maintenance measures when       preparing for use	. 6 . 4 . 4 . 1 13 . 5
Fuel, oils, etc.       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with       lift stand, removing from       O       Owner's Manual       P       Preparing for use       advice on preparing for first use       checks and maintenance measures when       preparing for use	. 6 . 4 . 4 . 11 . 5 . 5 . 8 . 9 . 9
Fuel, oils, etc.       Implied warranty       Intended use       M       Misuse       Motorcycle       lift stand, raising with       lift stand, removing from       O       Owner's Manual       P       Preparing for use       advice on preparing for first use       preparing for use       S       Safe operation	. 6 . 4 . 4 . 11 . 5 . 5 . 8 . 9 . 9 . 4 . 6

### Т

#### Technical data

	chass fork		0		0																					
U																										
Use	e defi	nitic	n	•		•			•								•		•	•	•			•	•	4
W																										
	rrant																									
Wo	r <mark>k ru</mark> l	les		•	 •	•	•	•	•	•	• •	•	•	•	•	•	•	•	•	•	•	•	•	•	•	5

# 

53000178en

06/2019

WP Suspension GmbH 5230 Mattighofen | Austria http://www.wp-suspension.com

